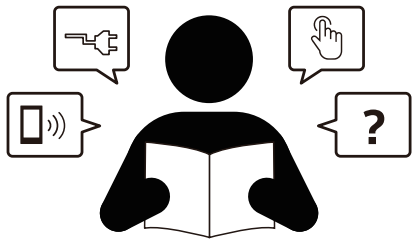

Wireless Audio Transmitter Receiver Set

User Manual

EN: User Manual
ZH:用户手册
DE: Benutzerhandbuch
ES: Manual de usuario
IT: Manuale d'uso
FR: Manuel de l'Utilisateur
JP:ユーザーマニュアル
KO:사용자 매뉴얼

Model: RT5066

EN: In the box **ZH:**包装内容
DE: In der Box **ES:**En la caja
IT: Nella scatola Prodotto **FR:**Dans la caja
JP:箱の中に **KO:**상자에

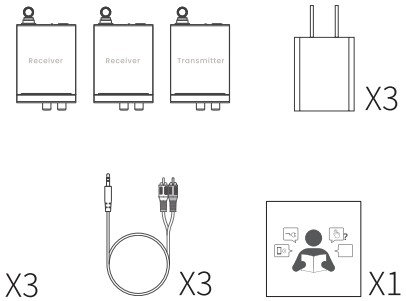

EN: Product overview **ZH:**产品概述
DE: Produktübersicht **ES:**Descripción del producto
IT: Panoramica del Prodotto **FR:**Présentation du produit
JP:製品の概要 **KO:**제품 개요

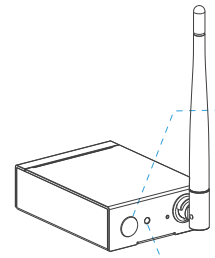

EN: Power button **ZH:**电源按钮
DE: Ein-/Aus-Taste
ES:otón de encendido
IT: Pulsante di accensione
FR: Bouton d'alimentation
JP:電源スイッチ **KO:**전원 버튼

EN:LED indicator **ZH:**LED指示灯
DE:LED-Anzeige **ES:**Indicador LED
IT: Indicatore LED **FR:**Indicateur LED
JP:LEDインジケータ **KO:**LED 표시등

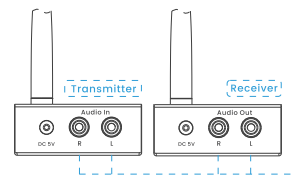

Audio In / Audio Out
EN: Left and right channels
ZH:左右声道
DE: Linker und rechter Kanal
ES: Canales izquierdo y derecho
IT: Canali sinistro e destro
FR: Canaux gauche et droit
JP:左右のチャンネル
KO:왼쪽 및 오른쪽 채널

EN: Wiring diagram **ZH:**接线图
DE: Schaltplan **ES:**Diagrama de cableado
IT: Schema elettrico **FR:**Schéma de câblage
JP:配線図 **KO:**배선도

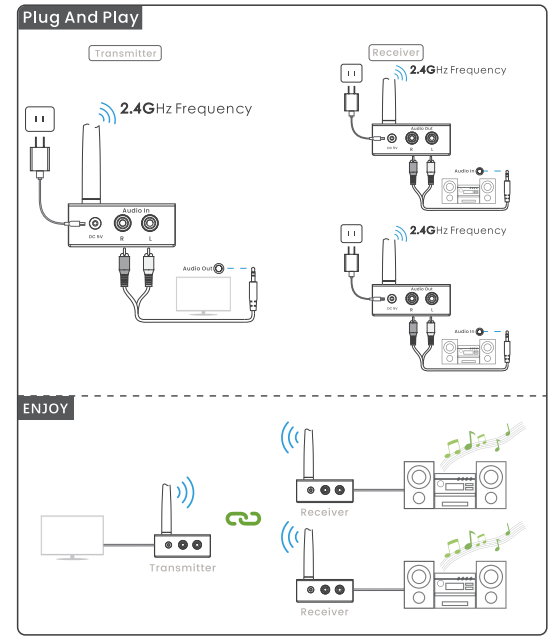

Plug And Play

EN: Connect RT5066 transmitter to audio device and power on.
ZH:将RT5066发射端与音频设备连接并且接通电源。
DE: Verbinden Sie den Sender RT5066 mit dem Audiogerät und schalten Sie das Gerät ein.
ES: Conecte el transmisor RT5066 al dispositivo de audio y encienda la alimentación.
IT: Collegare il trasmettitore RT5066 al dispositivo audio e accendere l'alimentazione.
FR: Connectez l'émetteur RT5066 à l'appareil audio et mettez l'appareil sous tension.
JP: RT5066送信機をオーディオデバイスに接続し、電源をオンにします。
KO:RT5066 송신기를 오디오 장치에 연결하고 전원을 켭니다.

EN: Connect the RT5066 tworeceivers to the speakers and turn on the power.
ZH:将RT5066两个接收器连接到扬声器设备并连接电源。
DE:chließen Sie die beiden Empfänger RT5066 an die Lautsprecher anund schalten Sie sie ein.
ES: Conecte los dos receptores RT5066 a los altavoces y enciéndalos.
IT: Collegate i due ricevitori RT5066 ai diffusori e accendeteli.
FR: Connectez les deux récepteurs RT5066 aux enceintes et mettez-les sous tension.
JP:RT5066の2台のレシーバーをスピーカーに接続し、電源を入れる。
KO:RT5066 2개 수신기를 스피커에 연결하고 전원을 켭니다.

EN: After power on, both indicators flash red and blue automatically which means pairing. Once successfully paired, both indicators stay solid blue.
ZH:开机后，设备自动进入配对状态指示灯红蓝循环闪烁，连接成功后蓝灯常亮。
DE: Die Statusanzeige für die Gerätesuche blinkt zyklisch rot und blau und das blaue Licht leuchtet immer, nachdem das Gerät erfolgreich verbunden wurde.

ES: El indicador de estado de búsqueda del dispositivo parpadea en rojo y azul de forma cíclica, y la luz azul está siempre encendida después de que el dispositivo se haya conectado correctamente.
IT:L'indicatore di stato della ricerca del dispositivo lampeggia ciclicamente in rosso e blu e la luce blu è sempre accesa dopo che il dispositivo è stato connesso correttamente.
FR:L'indicateur d'état de recherche d'appareil clignote en rouge et bleu cycliquement, et le voyant bleu est toujours allumé une fois l'appareil connecté avec succès.
JP:デバイス検索ステータスインジケータは赤と青で周期的に点滅し、デバイスが正常に接続された後は常に青色のライトが点灯します。
KO:장치검색상태표시기는빨간색과파란색으로주기적으로깜박이며장치가성공적으로연결되면파란색표시등이항상켜집니다.

EN: Indicator working status
ZH: 指示灯工作状态
DE: Anzeige Arbeitsstatus
ES: Estado de funcionamiento del indicador
IT: Stato di funzionamento dell'indicatore
FR: État de fonctionnement de l'indicateur
JP: インジケーターの動作状態
KO: 표시기 작동 상태

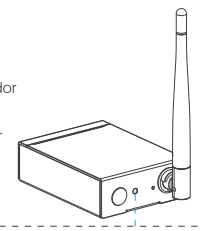

EN: Pairing mode **ZH:** 搜索模式 **DE:**Suchmodus **ES:**Modo de búsqueda
IT: Modalità di ricerca **FR:**Mode de recherche **JP:** 検索モード
KO: 검색 모드

EN: Paired **ZH:** 连接成功 **DE:**Verbindung erfolgreich **ES:**conexión exitosa
IT:connessione riuscita **FR:**connexion réussie
JP: 接続に成功しました **KO:** 연결성공

EN: Control function **ZH:**功能操作
DE: Steuerfunktionen **ES:**Función de control
IT: Funzione di controllo **FR:**Fonction de contrôle fonction
JP:制御機能 **KO:**어기능

EN: There is no need to press the power button when first use. After connect to the power supply, both devices are ready to pair.
ZH:首次使用时无需按电源键开机。接通电源后，设备即可进入配对状态。
DE: Beim ersten Gebrauch muss der Power-Knopf nicht gedrückt werden. Nach dem Anschließen der Stromversorgung kann das Gerät in den Suchzustand wechseln.
ES: No es necesario presionar el botón de encendido al usarlo por primera vez. Después de conectar la alimentación, el dispositivo puede ingresar al estado de búsqueda.
IT: Non è necessario premere il pulsante di accensione quando lo si utilizza per la prima volta. Dopo aver collegato l'alimentazione, il dispositivo può entrare nello stato di ricerca.
FR: Il n'est pas nécessaire d'appuyer sur le bouton d'alimentation lors de sa première utilisation. Après avoir connecté l'alimentation, l'appareil peut entrer dans l'état de recherche.
JP:初めて使用するときは電源ボタンを押す必要はありません。電源を接続すると、デバイスは検索状態に入ることができます。
KO:처음사용할때전원버튼을누를필요가없습니다. 전원을연결한후장치는검색상태로들어갈수있습니다.

EN: If you turn the receiver off by pressing the power button, please press the power button to turn it on next time.
Zh:接收端设备按电源键关机后再次通电使用需要按电源键开机。
DE: Wenn Sie den Receiver durch Drücken des Netzschalters ausschalten, drücken Sie bitte den Netzschalter, um ihn das nächste Mal einzuschalten.
ES: Si apaga el receptor presionando el botón de encendido, presione el botón de encendido para encenderlo la próxima vez.
IT: Se si spegne il ricevitore premendo il pulsante di accensione, premere il pulsante di accensione per accenderlo la prossima volta.
FR: Si vous éteignez le récepteur en appuyant sur le bouton d'alimentation, veuillez appuyer sur le bouton d'alimentation pour l'allumer la prochaine fois.
Jp:電源ボタンを押して受信機の電源を切った場合は、次回電源ボタンを押して電源を入れてください。
Ko:전원 버튼을 눌러 수신기를 껐다면, 다음에 전원 버튼을 눌러 수신기를 켜주세요.

EC
Ankbit international umited. hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

In accordance with Article 10(2) and Article 10(10). this product is allowed to be used in all EU member states.

Warranty
Warranty service is limited to normal use. Any man-made damages such as from connecting to an unsuitable power source, using an unsuitable device, or not following the instructions, as well as damages that did not occur during shipping, repairs, and adjustments not approved by the company, damages from misuse, inattention, or improper installation may cause the warranty to be ineffective immediately. This warranty does not include shipping fees.

Disposal
Always dispose of the used appliance at a recycling centre.
Do not dispose the used appliance together with household waste.

EC REP
eVatmaster Consulting GmbH
Bettinastr. 30
60325 Frankfurt am Main,Germany
contact@evatmaster.com

Operator: Ankbit International Limited
Address: Room 803, Chevalier House, 45-51 Chatham Road South, Tsim Sha Tsui, Kowloon, Hong Kong
Manufacturer: ShenZhen Ankbit Electronics Limited
Address: Runfeng Industrial Park, No. 4197 Baoan Blvd., Xixiang St., Baoan Dist., Shenzhen, China

FCC ID:2AUFR-RT5066

MADE IN CHIN

105g铜版纸+折页+四色印刷

项目名称	RT5066R2	备注	
物料名称	RT5066R2说明书-中性	版本	V1.0
物料编号	695066021	制作	林静
物料尺寸	75*100mm	日期	2023/03/29